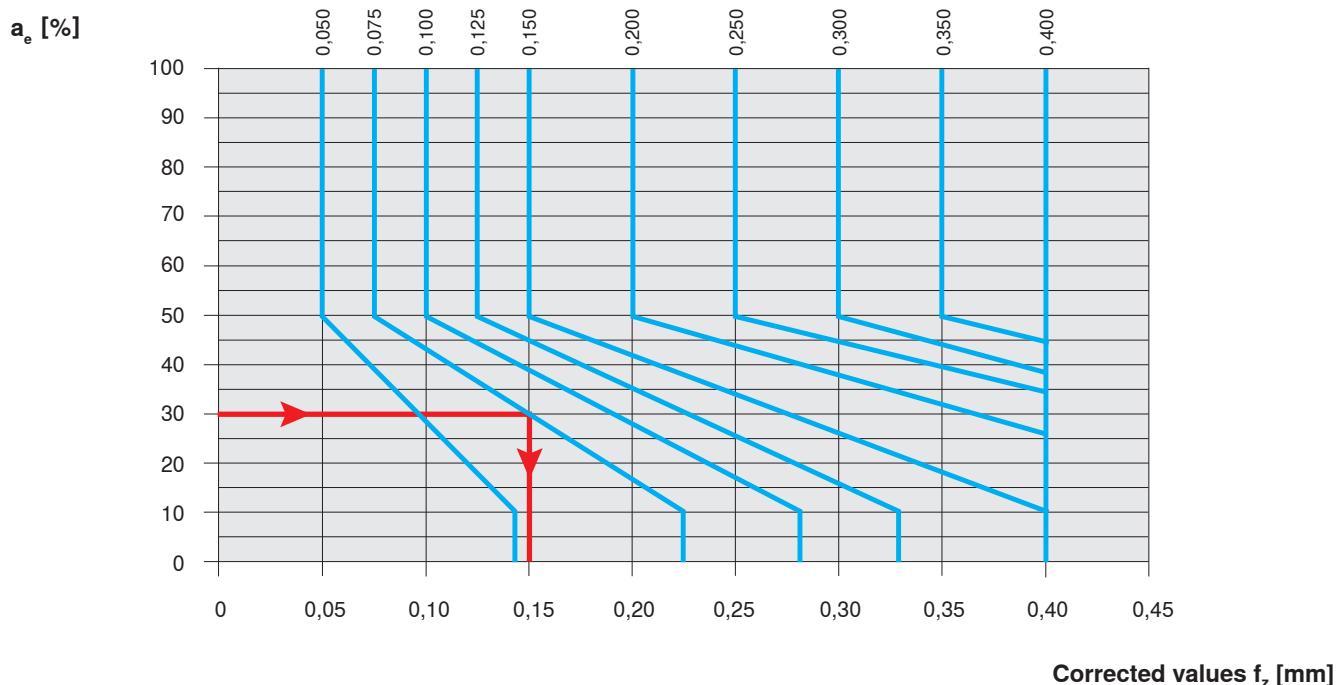
Starting values  $f_z$  [mm] from starting parameter diagram

These parameters apply for cutting width ( $a_e$ ) below 50%

**Example:**

Starting value  $[f_z] = 0.075$  mm

$a_e = 30\%$

Corrected value  $[f_z] = 0.15$  mm